What type of Accent Wall Design fits your space?

An accent wall can be a great way to add character and visual interest to any room. Whether you're looking to create a focal point, highlight architectural features, or simply add a pop of color.

In this ebook, we'll explore different accent wall design ideas and provide tips on how to choose the best one for your space.

Let's Get Creative!

Step 1: Choosing the Right Wall

The first step in designing an accent wall is selecting the right wall.

Here are some factors to consider:

- **Focal point:** Choose a wall that naturally draws the eye, such as the one behind a bed, couch, fireplace, and even the ceiling.
- **Architectural features:** Highlight a wall that has unique architectural details, such as a wall with crown molding or exposed brick.
- **Balance:** Consider the balance of the room and choose a wall that will create visual harmony.
- **Interior Design Style:** Choose a wall design that will fit the style of your home.

Types of Designs that fits different Interior styles

Wood Slat

Made of ½-inch wide to 2-inches wide slim, vertical strips of wood that run from floor to ceiling, depending on the look you're going for. This goes well with Modern, Industrial, Farmhouse, Boho and Midcentury type of interior design.

Geometric

This type of design is well decorated to be a bold and fresh focal point of the room. A variety types of geometric designs from wood accent walls, hexagons, diamond shape and other 3D designs.
These types of designs go well with Farmhouse, Industrial, Modern, Traditional, Eclectic, and Transitional interior design.

Wainscoting

A type of decorative paneling. It's typically limited to the bottom half or three-quarters of a wall, but it also includes some type of molding at the top as well, to differentiate it from the wall.
This type of design can be used with a Boho, Mid-Century, and Traditional type of interior design.

Types of Designs that fits different Interior styles

Shiplap

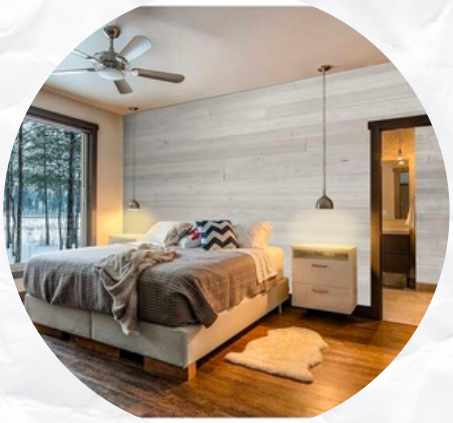

This can add instant character, texture, rusticity and a focal point to any room in your house. It has grooves cut into their edges for a tight, overlapping fit, which can be installed vertically or horizontal.
This type of design goes well with Rustic, Farmhouse, and Industrial type of interior designs.

BeadBoard

A row of narrow wood planks lined up vertically on the wall, which adds visual interest to any wall. It is relatively durable, an inexpensive alternative to tile, can be painted any color, and installed at any height.
This goes well with Traditional, Farmhouse and Midcentury type of interior design.

Board and Batten

A type of wood paneling that can be wide boards that are nailed side by side, often vertically. There is narrow strips of wood, called a "batten," that is fastened over the seams between wood boards that adds a 3-dimensionality and character to the siding.
This can be used in interior design ranging from Farmhouse, Modern, Traditional to Boho chic looks.

Step 2: Color and Pattern

Once you've chosen the right wall, it's time to decide on color and pattern. Here are some ideas to consider:

Bold colors: A bright, bold color can create a dramatic statement. Consider using a color that contrasts with the rest of the room's color scheme.

Textured wallpaper: A patterned or textured wallpaper can add depth and interest to a space.

Geometric designs: A geometric pattern can create a modern and bold statement.

Murals: A mural can create a unique and personalized accent wall. Consider commissioning an artist to create a custom design.

Step 3: Accent Wall Materials

In addition to color and pattern, the materials you use for your accent wall can also make a big impact. Here are some ideas to consider:

Wood paneling: Wood paneling can create a warm and rustic feel.

Brick or stone: Exposed brick or stone can add texture and depth to a space.

Tile: Tile can create a sleek and modern look, and is a great option for a bathroom or kitchen.

Wallpaper: As mentioned before, wallpaper can create a textured or patterned look.

Step 4: DIY Accent Wall Tips

Designing and installing an accent wall can be a DIY project. Here are some tips to keep in mind:

Measure carefully: Measure the wall and calculate how much paint, wallpaper, or materials you'll need.

Prep the wall: Make sure the wall is clean and free of debris. Sand any rough spots and apply a primer if necessary.

Get creative with tools: You don't need to use traditional painting tools. Consider using stencils, sponges, or even a comb to create a unique pattern.

Take your time: Installing an accent wall can take time and patience. Don't rush the process, and make sure each layer of paint or material is fully dry before moving on to the next step.

An accent wall can transform a room from ordinary to extraordinary. With the right wall, color and pattern, and materials, you can create a statement that reflects your personal style.

Remember to take your time and have fun with the process!

Have my team design and install an accent wall of your choice for your space

DESIRED HOMES

Accent Wall Designs

For Residential and Commercial

Contact Us at

www.desiredhomesus.com

(602) 492-1233

Schedule a Consultation

Elevate Your Space!